

## 07-18 JEEP WRANGLER JK Front Inner Fenders



### CAUTION BEFORE INSTALLING

**Before installation** - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

**E-mail:** [tech@calliert4x4.com](mailto:tech@calliert4x4.com)

**CALLIERT is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.**




Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.**


*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:*

- Name of purchase location
- Bar Code on side of box


# INSTALLATION MANUAL

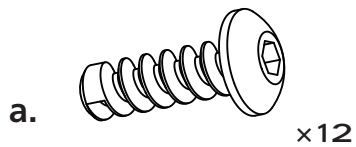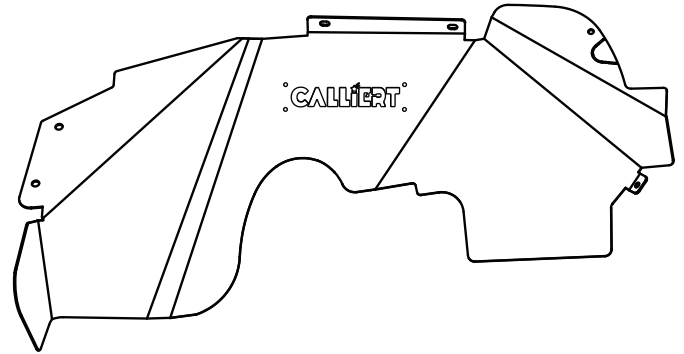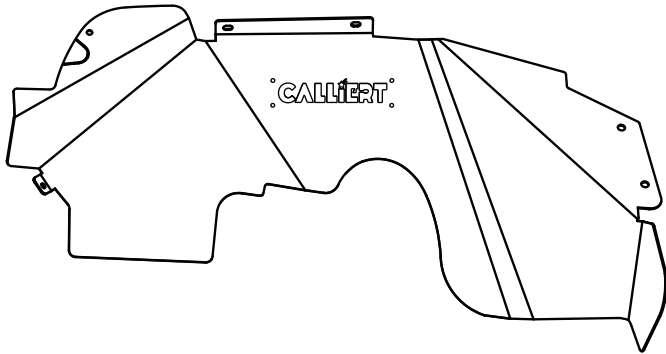


**M6\*20**  
**Button Head Hex Socket Bolt**

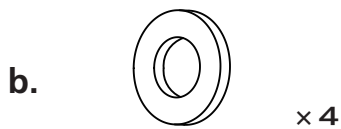


**M6\*14\*1 Washer**

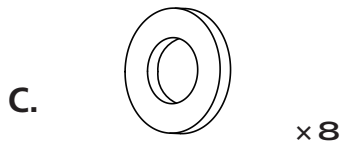


**M6\*18\*1 Washer**

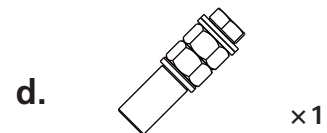

**Rivet Nut Tool**



**Rivet Nut**




**U-nut Clip**



**CALLIART**

# INSTALLATION MANUAL

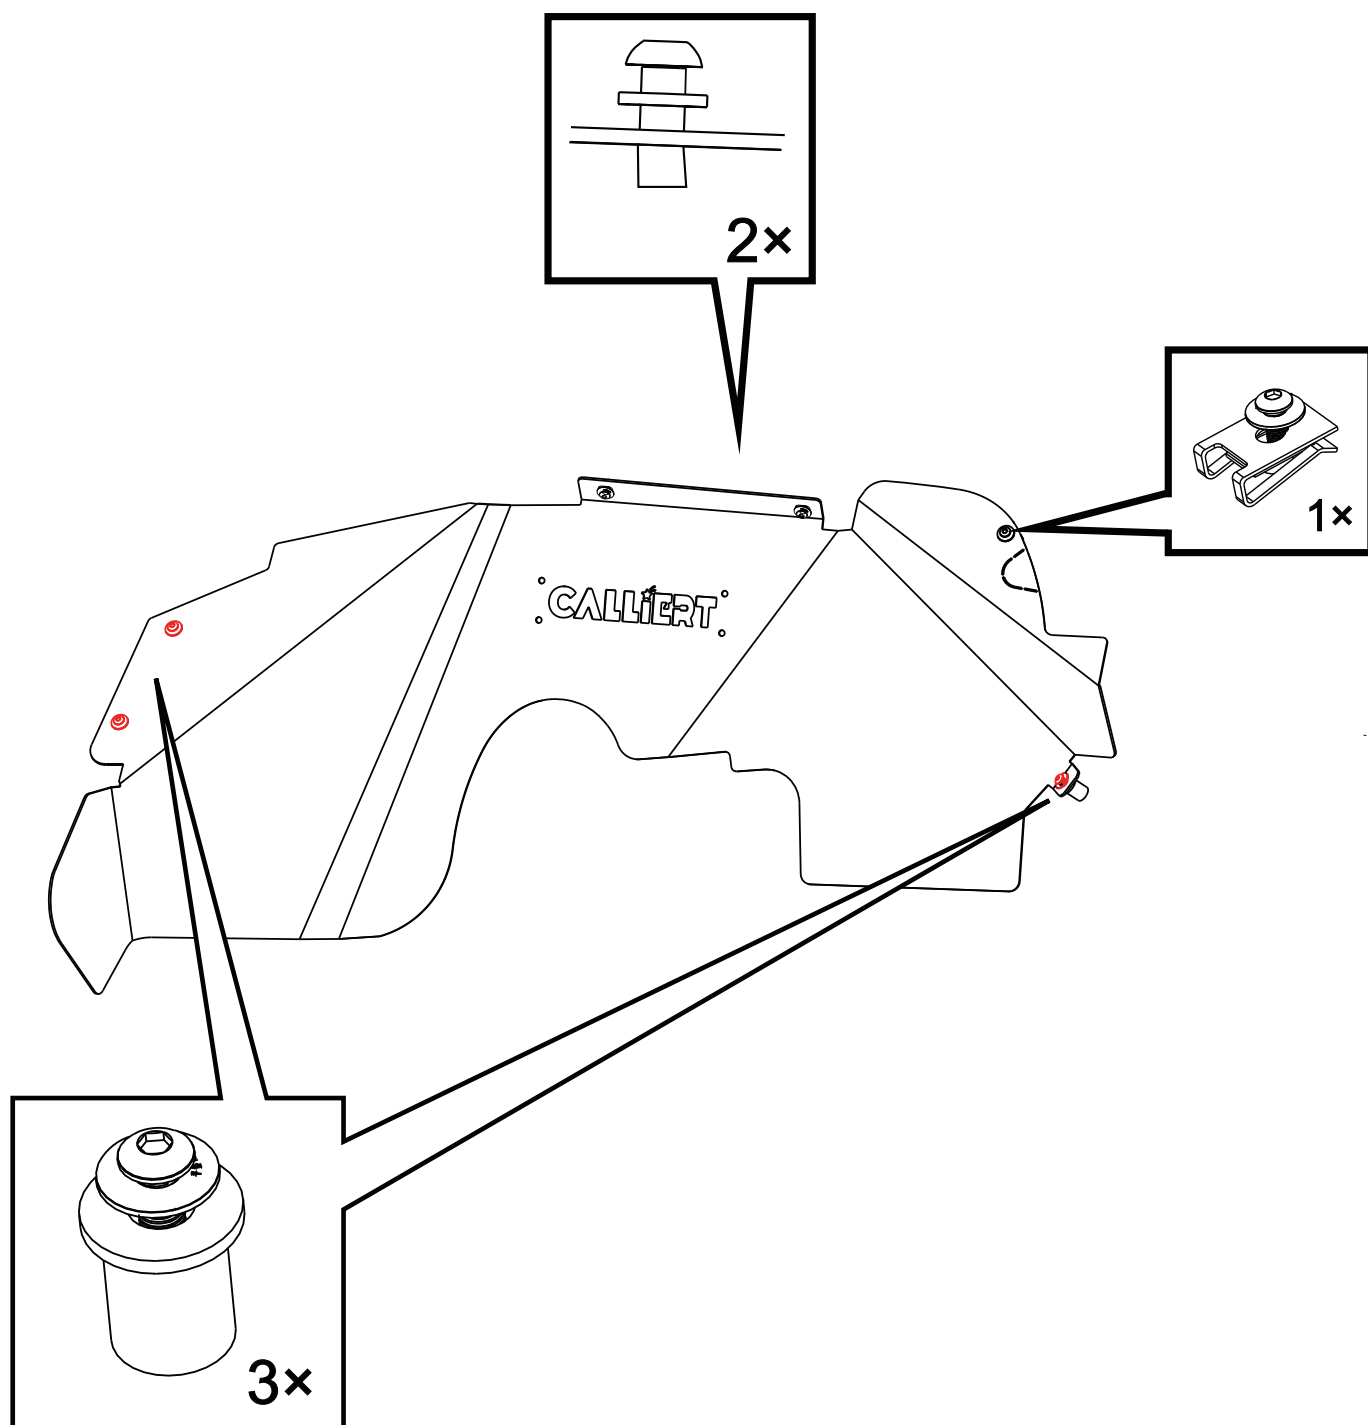




# INSTALLATION MANUAL



Install the rivet nut into the designed hole.  
Drilling is necessary to fit the rivet nut into the hole.

# INSTALLATION **MANUAL**

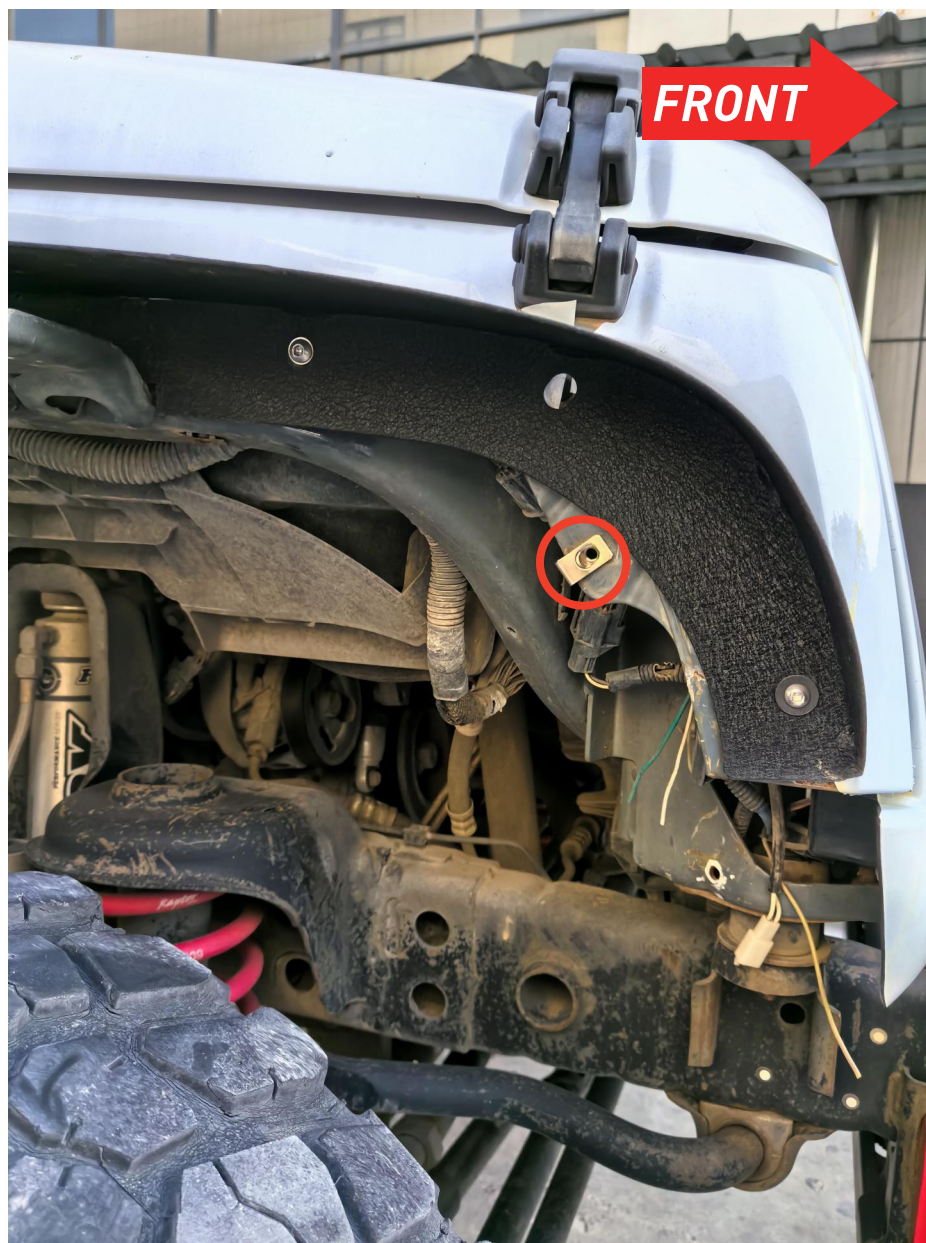

Place the clip to the factory hole.

**CALLIERT**

# INSTALLATION **MANUAL**



Mounting the pre-assembled liner to the body using bolts, washers and nuts.  
Next, attempt to tighten all the inner fender bolts that were previously hand tight.  
Bolt the last bolt through the factory hole.



# INSTALLATION MANUAL



Repeat on the opposite side.

