

18-24 JEEP WRANGLER JL Rear Inner Fenders



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
E-mail: tech@calliert4x4.com

CALLIERT is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.




Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.**


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Bar Code on side of box

INSTALLATION MANUAL

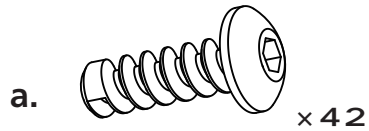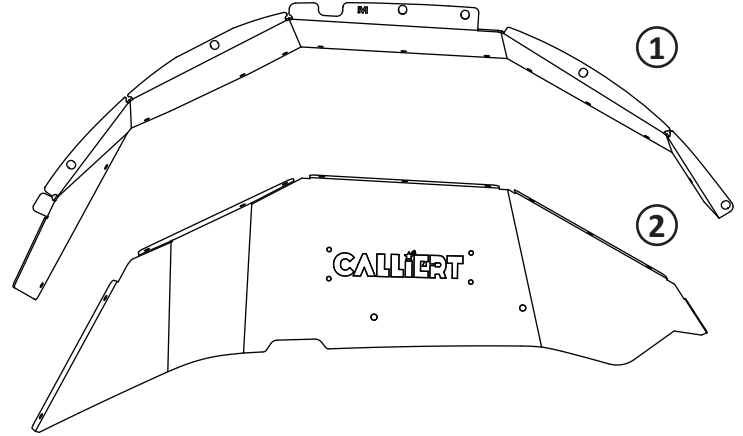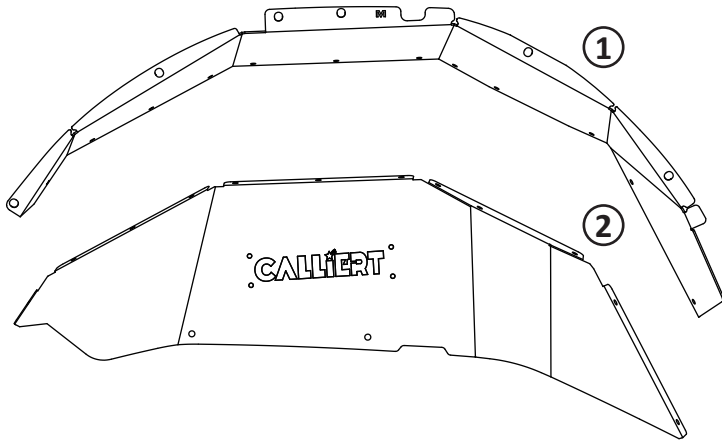


**M6*20
Button Head Hex Socket Bolt**

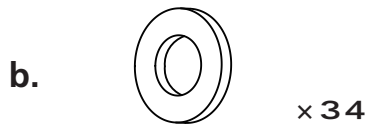


M6*14*1 Washer




M6 Hex Flange Nut

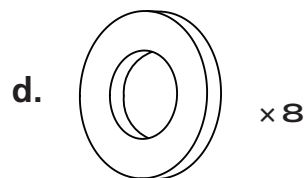


M6*18*1 Washer



U-nut Clip



⑤



x1

⑥




CALLIERT


INSTALLATION MANUAL




Note: Inner fender liner #5 should be installed under the rear seat, while liner #6 should be installed under the rear passenger-side seat. Please take care to differentiate between them.

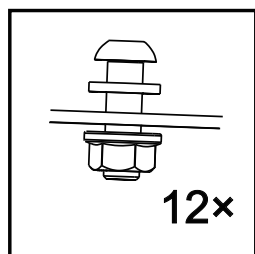



12x

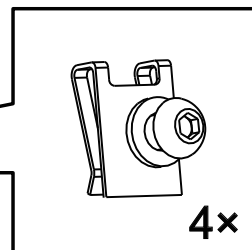


4x

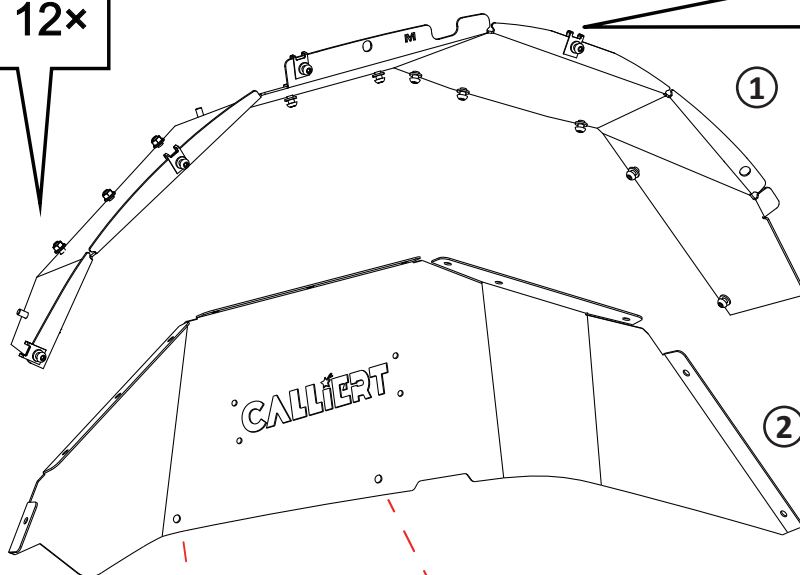


6

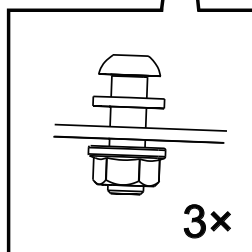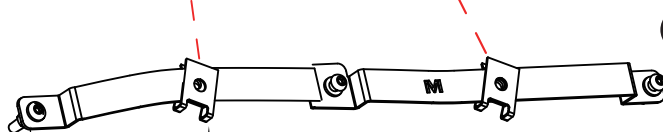

3x

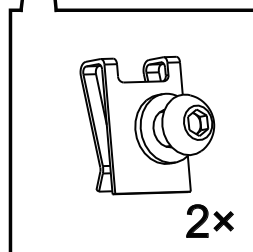


2x

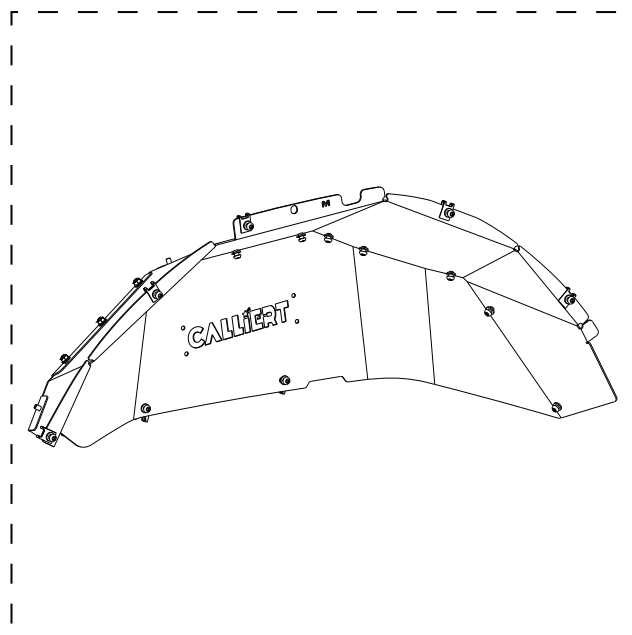


CALLIERT

INSTALLATION MANUAL

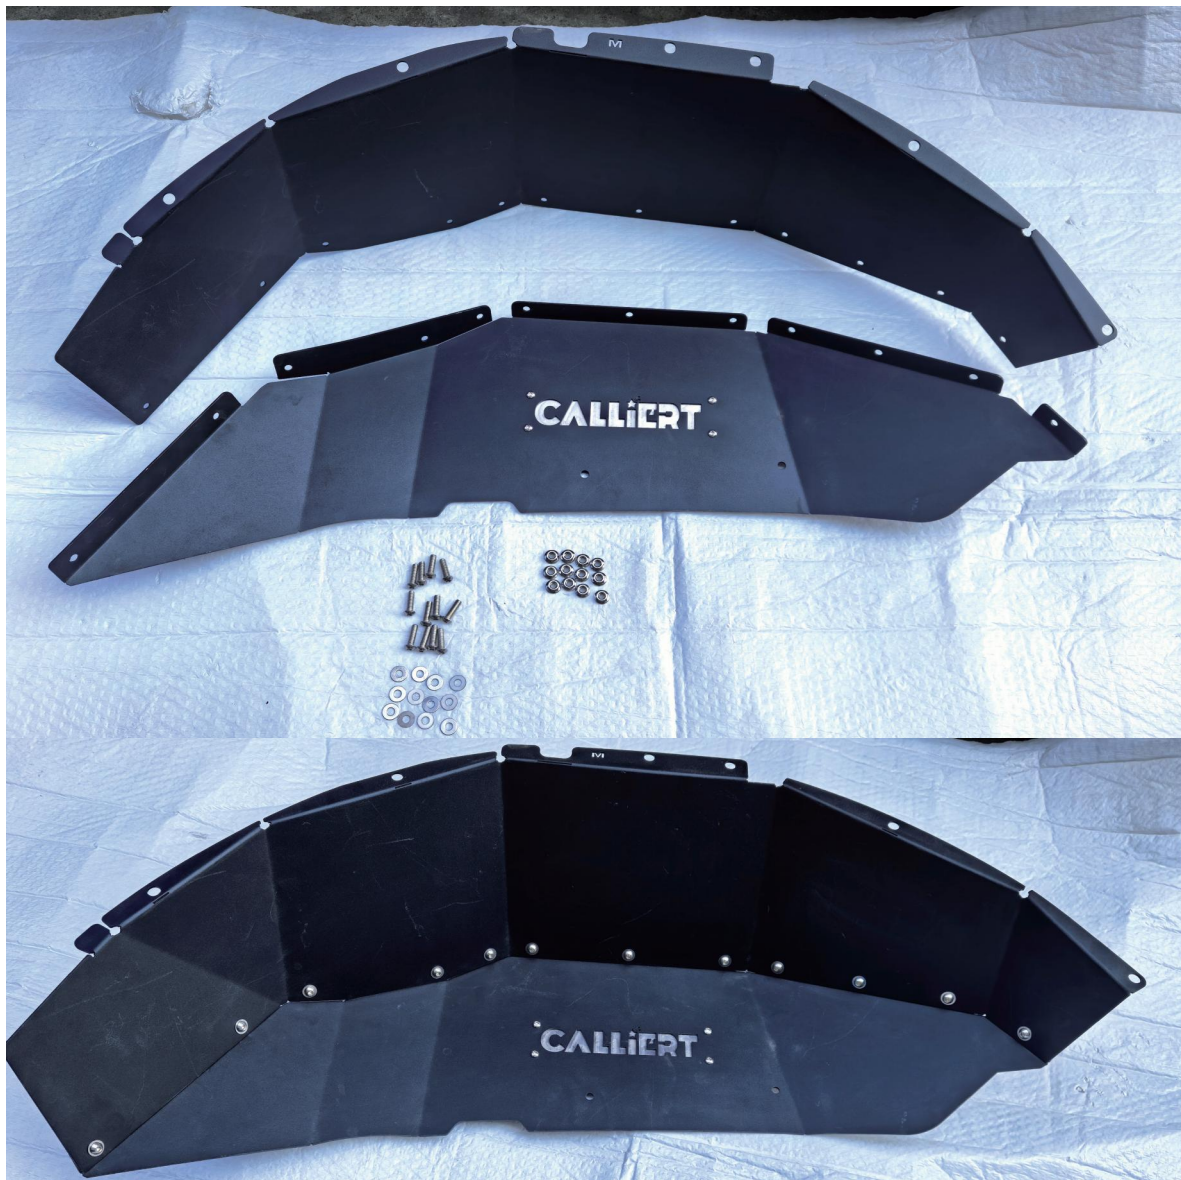

Hardware required.
Preassemble the front inner fender liner using bolts, washers, nuts.
Leave the bolts finger tight, as they will be tightened in a later step.
(a*12 b*12 c*12)

INSTALLATION MANUAL

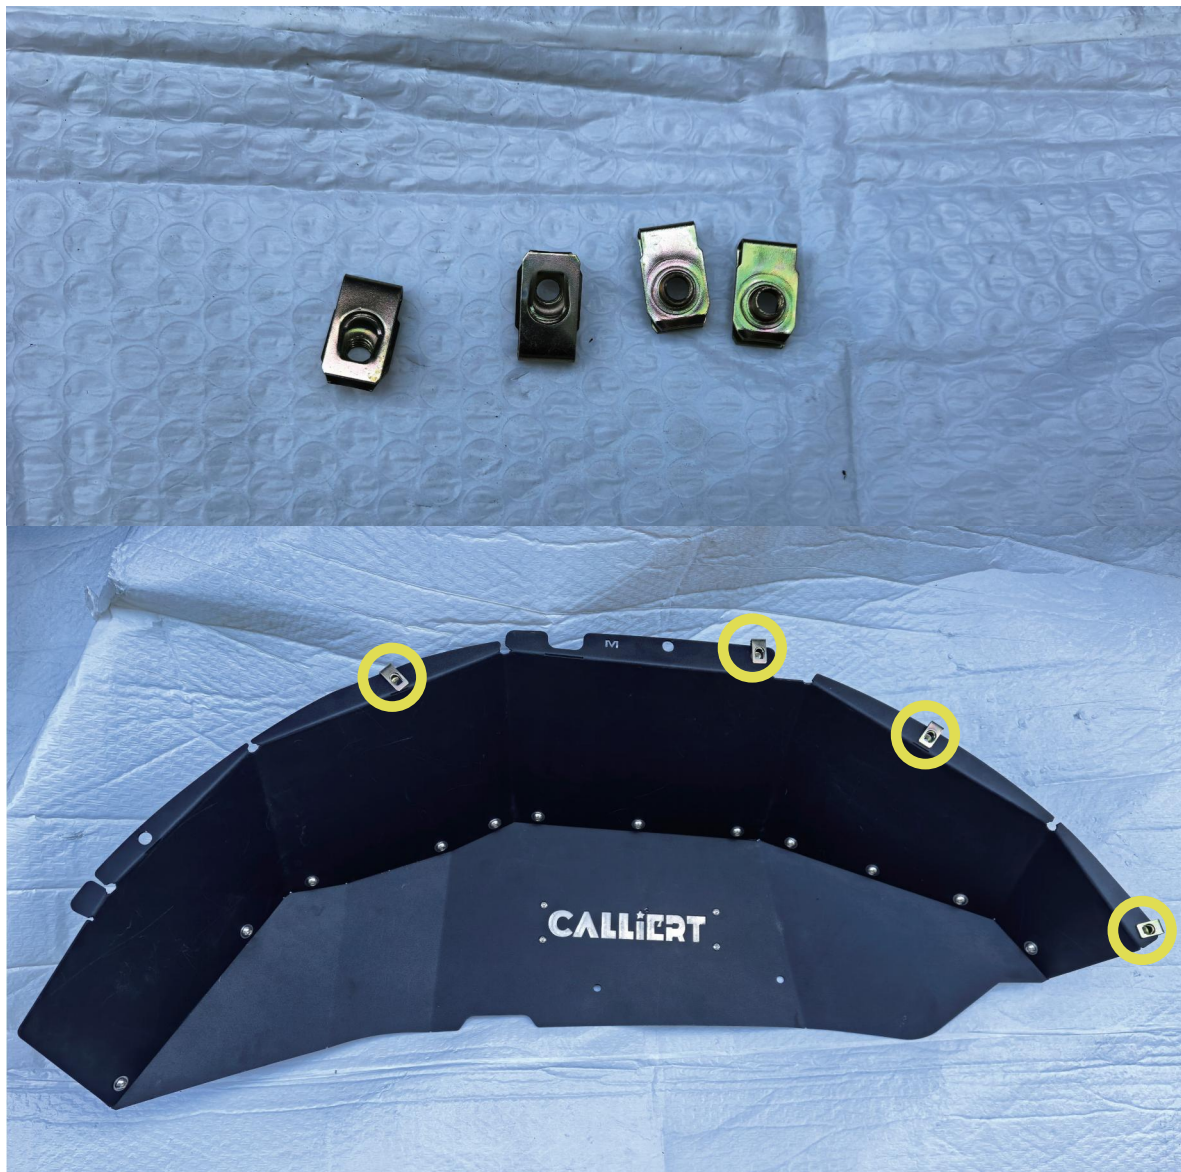

Obtain 4 U-nut clips and affix them to the designated holes as shown in the diagram.

(e*4)


INSTALLATION MANUAL



Assemble the necessary components for installing the inner fender liner and position them as shown in the diagram.

(a*3 b*3 c*3 ⑤*1)

INSTALLATION MANUAL

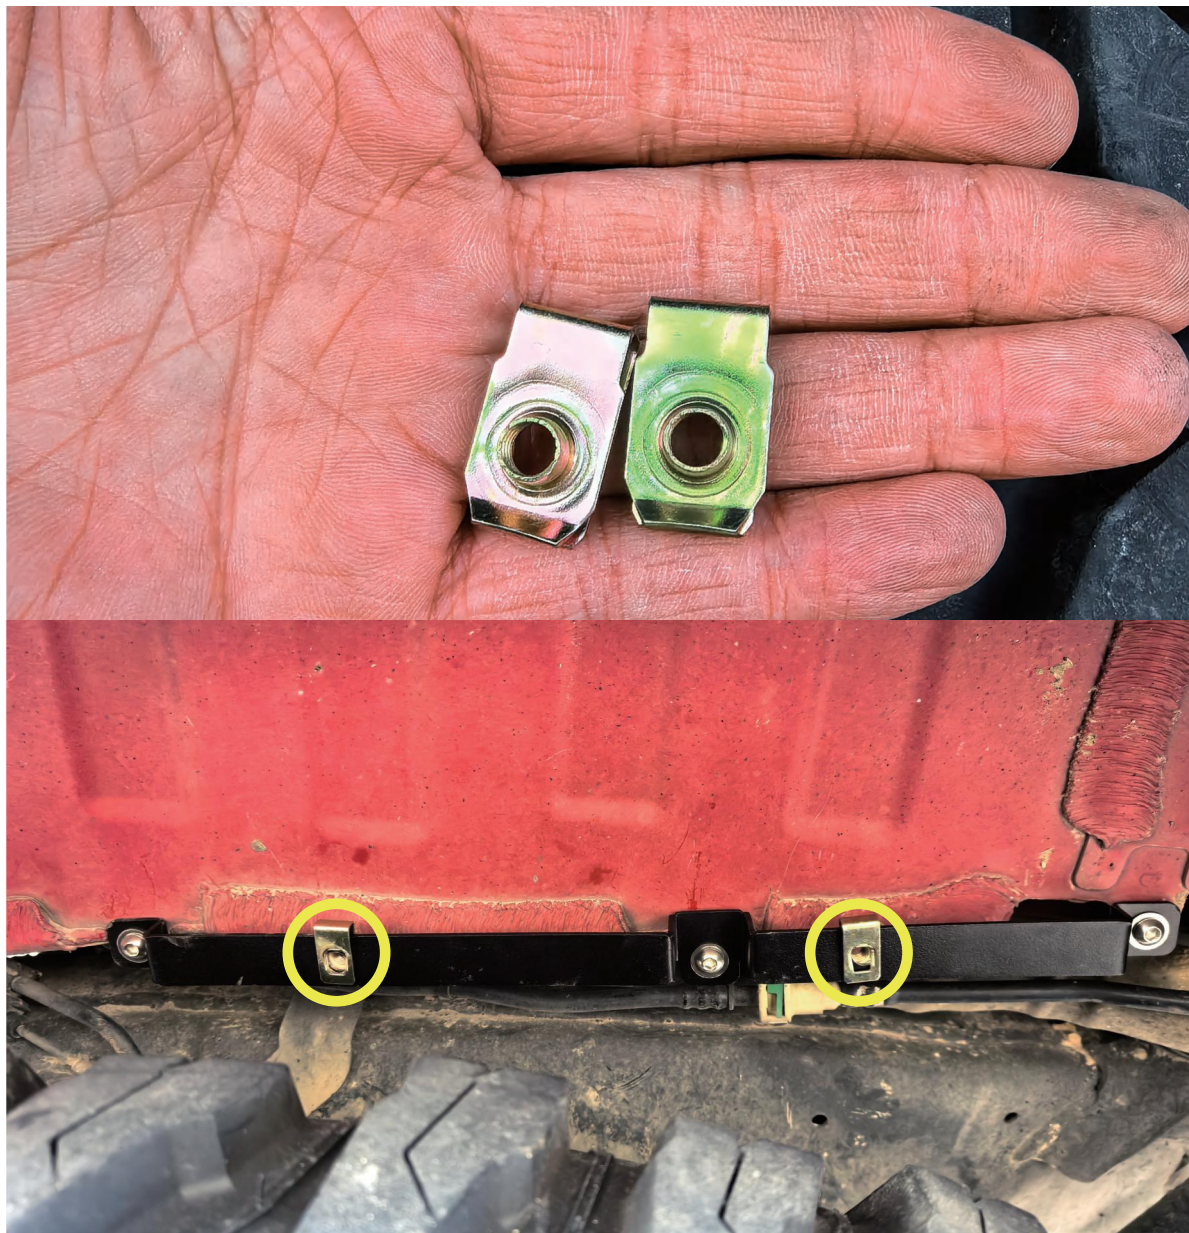

Obtain 2 U-nut clips and affix them to the designated holes as shown in the diagram.
(e*2)

INSTALLATION MANUAL



Gather the required components for installing the inner fender and position them as illustrated.

(a*6 b*2 d*4)

Complete the installation.

Complete the installation on the opposite side using the same procedure.

CALLIERT